


Universal

DELUXE TWIN SHOWER

455200

Rail:

- Integrated top water inlet and diverter
- Slider to adjust height and angle of hand shower
- Made from SUS304 stainless steel
- 1.5 metre stainless steel hose
(PVC on matte black model)

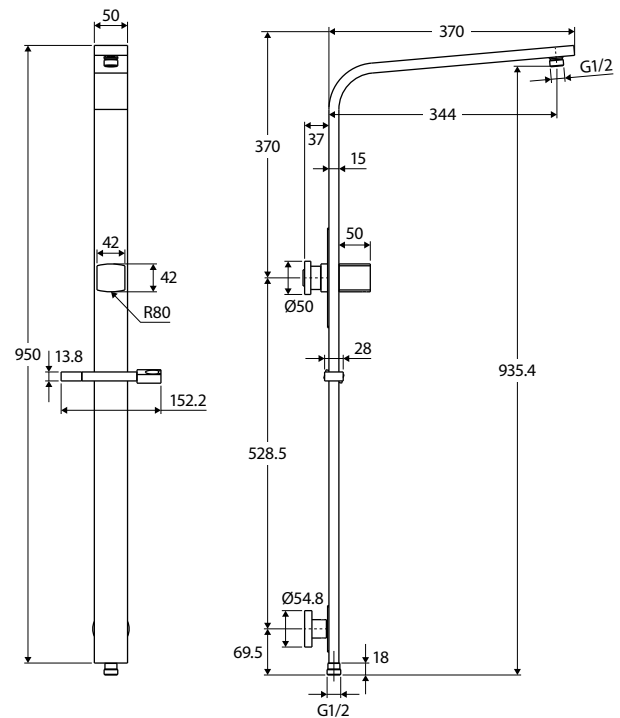

IMPORTANT: Please read all of the instructions before installation. Check the product thoroughly for damage. Installation is acceptance of goods supplied and will void warranty. This product is pre-assembled. Do not disassemble, as this may void the warranty.

Specifications

Please refer to **fienza.com.au** for the latest product specifications before installing.

Operating Pressure	Min: 150 kPa / 1.5 bar Max: 500 kPa / 5 bar Optimum: 150 kPa / 1.5 bar - 500 kPa / 5 bar Installation of pressure limiting valve recommended if supply exceeds 500kPa
Operating Temperature	Hot: Max 80°C Cold: Min. 5°C
Inlet Connections	1/2" BSP
Suitable Hot Water Units	Storage tank and continuous flow only. Not suitable for gravity feed.

General Information


- This product must be installed by a qualified licensed plumber in accordance with AS/NZS 3500 and all applicable local regulations and plumbing codes.
- All pipe work must be thoroughly flushed prior to installation.
- Do not remove the ceramic cartridge from the mixer when installing.
- After installation all hoses and connections must be checked for leaks.
- It is the responsibility of the installer to ensure a waterproof seal is achieved between the product and mounting surface.

Installation


IMPORTANT:

- Before commencing installation, turn off the water supply. While not essential, we recommend fitting isolation valves to both the hot and cold-water supply.
- Some shower heads only operate correctly when hot and cold water supplies are both mains pressure and may not be suitable for some instantaneous hot water services.
- When water pressure is in excess of 500kPa a pressure limiting device is required.
- Some showers may not provide an effective shower when used with gravity fed heated water systems or where pressures are less than 150kPa at the outlet. Additionally, showers with flow rates of less than 9L/min may not allow the following to function correctly:
 - Some instantaneous water heaters
 - Some tempering valves
 - Some thermostatic mixing valves


- 1.** Install a ½" male threaded connection at the appropriate height on wall, ensuring that a minimum of 13±2mm of thread protrudes past the finished wall. Correct water proofing must be applied. Water inlet position will be determined by the desired overhead shower height.

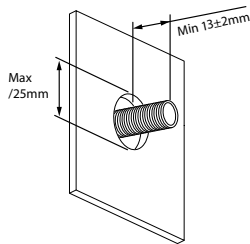

- 2.** Apply thread tape (or similar) to the ½" connection, then screw the top rail connector to the connection.

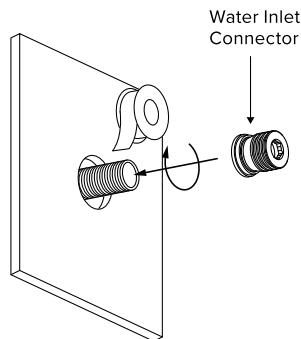


- 3.** Screw the bottom rail connector to a wall stud making sure it is vertically in line with the top rail connector. Maximum centre distance between the top and bottom shower connections is 528.5mm.

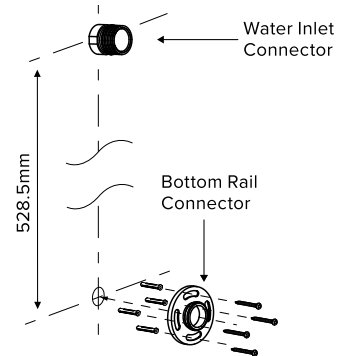


- 4.** Attach the handshower slider bracket to the rail from the bottom of the rail and fasten at the desired height.


Water inlet position will be determined by desired overhead shower height

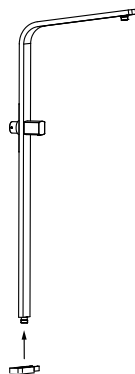


- 5.** Fasten the bottom fixing components to the back of the bottom of the rail with the - parts 19, 20, 21, 22. Check the grub screws are in place.

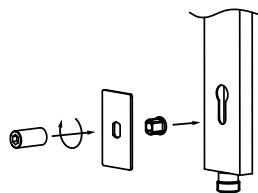

- 6.** Check the grub screws are in place on both top and bottom rail fixings. Push the rail brackets onto the top and bottom rail connectors until they are against wall. Secure with grub screws.

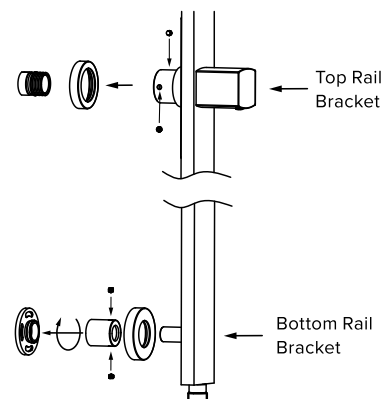


- 7.** Remove the protective cap from the showerhead ball joint and screw the unit onto the overhead arm ensuring the filter washer is in place. This arm is not adjustable.

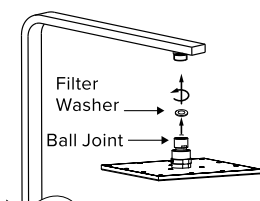

- 8.** Make sure a washer is in both ends of the hose. Screw hose onto lower outlet on rail, attach hand shower and place firmly in holder. Tilt and rotate head to the desired position.




1	1.5 m Hose
2	Hose
3	Connector
4	Pipe
5	Connector
6	Nut
7	Trim Panel
8	Screw
9	Diverter Body
10	O Ring
11	O Ring
12	Connector
13	Flange
14	Nut
15	Slider
16	Fixing Base
17	Flange
18	O Ring
19	Fixing Base
20	Fixing Base
21	Trim Panel
22	Screw
23	Connector
24	Diverter Cartridge
25	O Ring
26	Pipe
27	M25X1 Gland
28	Screw
29	Wear Ring
30	6.8 Cover
31	Handle
32	Connector

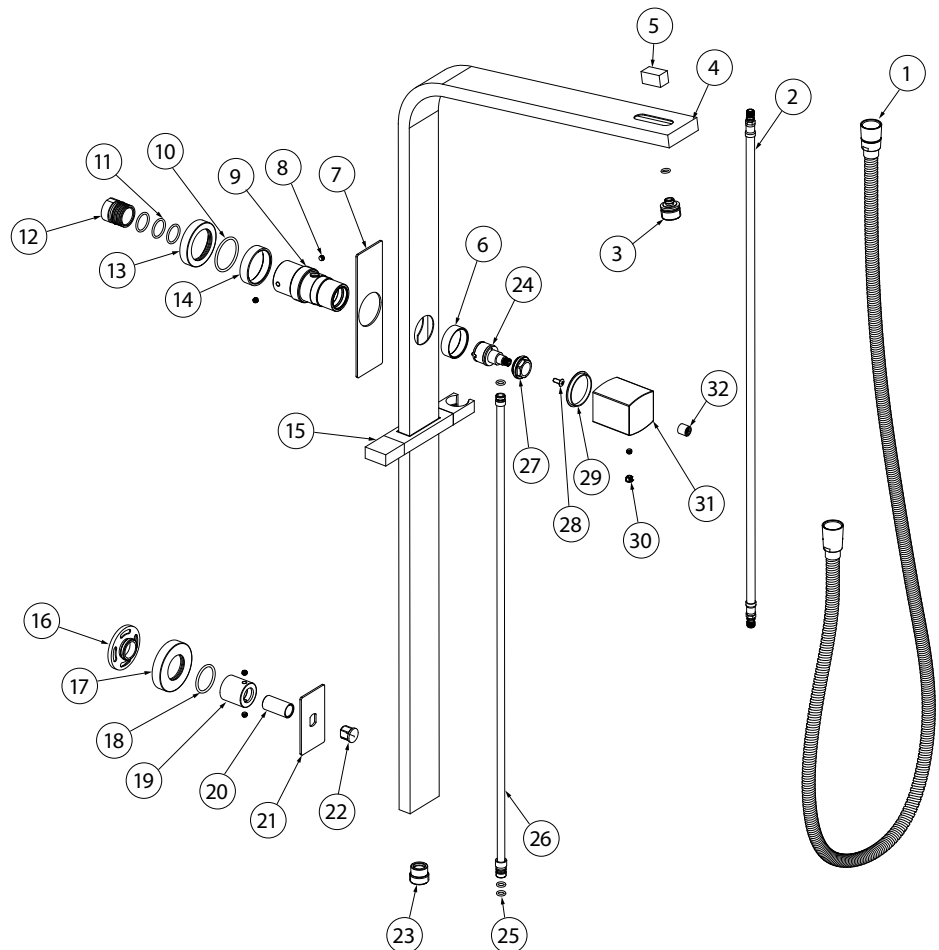

Cleaning & Care

We recommend weekly cleaning with mild soapy water and a microfibre cloth. In highly polluted or coastal locations we recommend cleaning 2-3 times per week. Please note that colour tapware requires more frequent cleaning than chrome tapware.

- Never use harsh detergents, citrus-based cleaners or abrasive cleaners, as these will scratch the surface. Use of unsuitable cleaners may damage the surface and will not be covered by warranty.
- Where your tapware remains dry in use, a non-abrasive soft cloth can be used to remove surface dust.
- Use of wax-based furniture creams should be avoided as these can result in a build-up of deposits which can effect the appearance.
- Do not use undue pressure and wipe in one direction only.

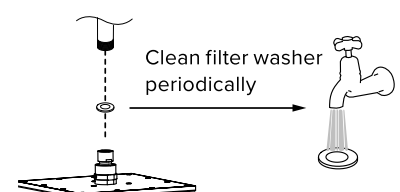

Warranties

At Fienza we pride ourselves on supplying products of a high standard. Our warranty periods are extremely competitive and practically designed to give the end user peace of mind. Our dedicated After Sales Service and Warranty team are here to help both retailer and end user customers.

Scan the QR code or visit www.fienza.com.au/warranty/ for residential and commercial warranty terms and conditions.



Full Warranty Terms

PLEASE LEAVE THIS MANUAL WITH THE END USER

For more information, contact us or visit our website:
(07) 3490 6700 | help@fienza.com.au | fienza.com.au

Updated: 02/07/2026