Blanca

CONCRETE WALL BASINS

RB061

Warm Grey **RB061**
Warm White **RB061W**
Terrazzo **RB061TZ**
Tuscan **RB061TU**
Sage **RB061SG**
Lunar Terrazzo **RB061LT**

- Right bowl design with integrated shelf
- Concrete with food-grade nano sealant
- No overflow
- Requires 32 mm non-overflow waste (not included)
- Extra heavy duty mounting brackets and bolts included

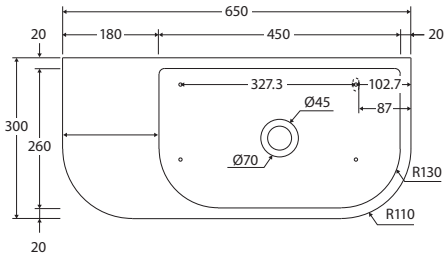

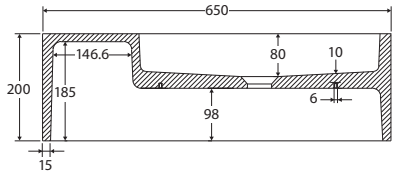

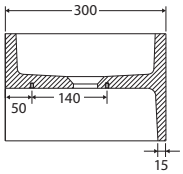

Plumbers Installation Instructions

PLEASE READ CAREFULLY BEFORE INSTALLATION

The fixings supplied are suitable for solid walls only. Plasterboard or stud walls may require specialist fixings (not supplied).

CAUTION: Care should be taken when drilling walls and floors to avoid any sunken electrical wires or water pipes.

FOR OTHER WALL CONSTRUCTION SYSTEMS USE SUITABLE FIXING METHOD.

All installations should be carried out by a qualified tradesman in compliance with the National Plumbing & Drainage Code and any State or Local Authority Regulations, in accordance with AS/NZS 3500 series of standards and AS/NZA 6400. All measurements are in millimetres and are subject to change without notice. For ceramic products, please allow +/- 10 mm tolerance for manufacturing variance. Please refer to fienza.com.au for the latest product specification.

Basin Installation with Fixing Kit

1. Mark out the installation height and the centre line of the basin on the finished wall and prepare water inlet and outlet connections.

Note: This basin is not suitable for AS1428.1 installation where knee/toe clearance is specified.

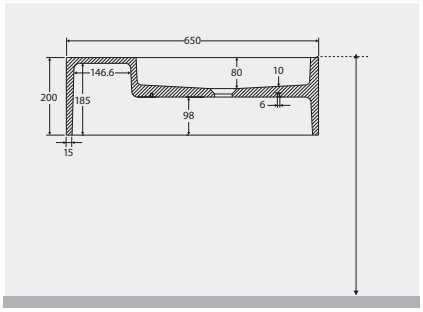

2. Fit the two mounting brackets to the bottom of the basin with the provided M5 x 10mm screws and flat washers and tighten. Please note the brackets are left and right specific.

Caution: Do not over tighten the bracket to basin screws as this may damage the concrete basin.

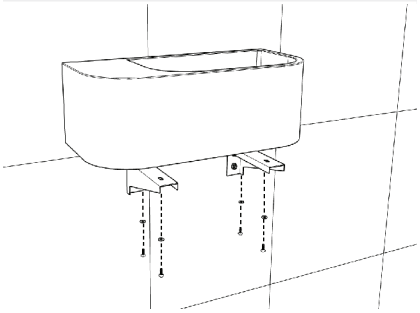

3. Hold the basin against the wall in the desired position according to the centre line and adjust to be flat and centred. Mark the position of the bracket fixing holes onto the wall. Remove the basin and drill four holes in the masonry wall using a 10mm masonry drill bit, to the required depth.

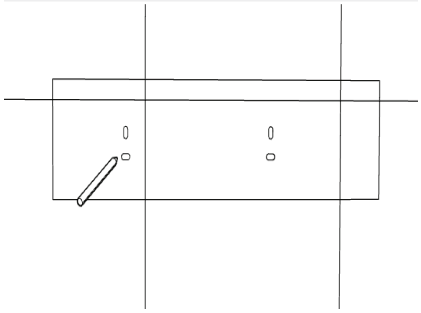

4. Place an anchor bolt into each drilled hole and remove the nuts and washers from the anchor bolts.

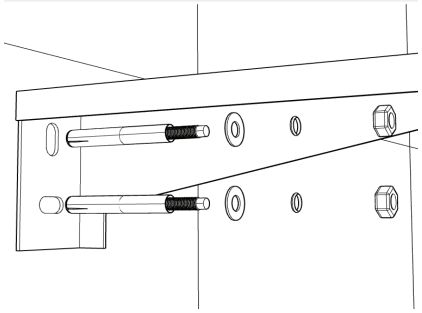

5. Place the basin in position against the wall, locating the anchor bolt threads through the holes in the basin brackets. Place the flat washer, a spring washer and nut onto each anchor bolt. Tighten the nut on each anchor bolt to secure the basin.

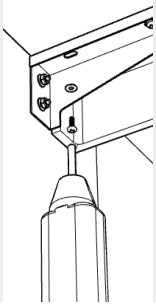

6. Install the tapware and the waste plug according to the installation instructions for the fittings. Connect the water supply pipe and the drainage pipe.

*Note: Connect the hot water and cold water pipes according to the tapware markings.

All installations should be carried out by a qualified tradesman in compliance with the National Plumbing & Drainage Code and any State or Local Authority Regulations, in accordance with AS/NZS 3500 series of standards and AS/NZA 6400. All measurements are in millimetres and are subject to change without notice. For ceramic products, please allow +/- 10 mm tolerance for manufacturing variance. Please refer to fienza.com.au for the latest product specification.

Warranties

At Fienza we pride ourselves on supplying products of a high standard. Our warranty periods are extremely competitive and practically designed to give the end user peace of mind. Our dedicated After Sales Service and Warranty team are here to help both retailer and end user customers.

Scan the QR code or visit **www.fienza.com.au/warranty/** for residential and commercial warranty terms and conditions.

Full Warranty Terms

PLEASE LEAVE THIS MANUAL WITH THE END USER

For warranty support, please contact Fienza
15 Walter Cres, Lawnton QLD 4501 | PO Box 5381, Brendale QLD 4500
P 07 3490 6700 **F** 07 3490 6719 **E** help@fienza.com.au ABN 76 136 411 311

fienza